




easywalker
QTRO

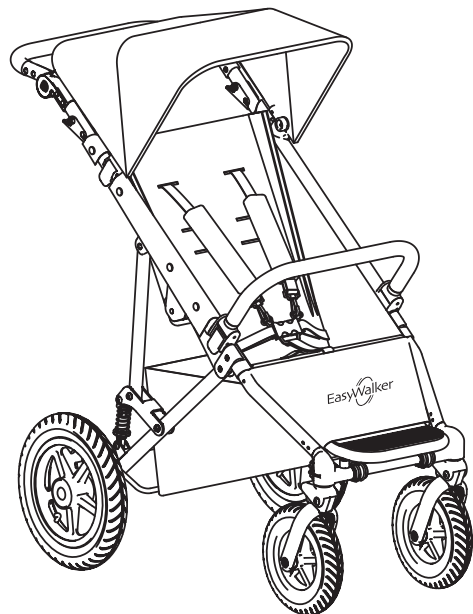

BS 7409: 1996
BS EN 1888




Dutch Design
Made in China



easywalker

QTRO

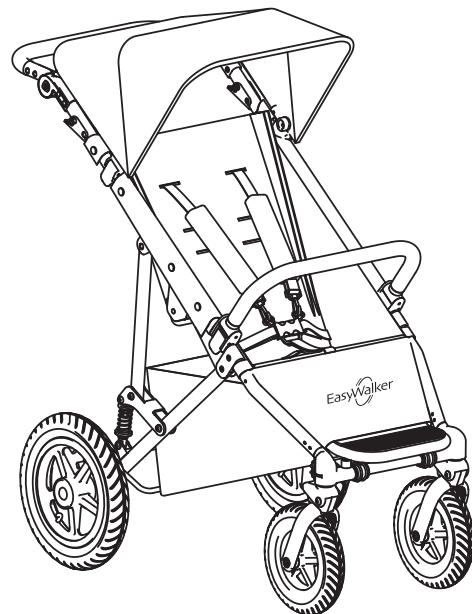

Gebruiksaanwijzing

NL

Instructions

EN

Manual de instrucciones

ES

Gebrauchsanweisung

DE

Mode d'emploi

FR













Istruzioni per l'uso













IT

Инструкции

RU

easywalker
QTRO

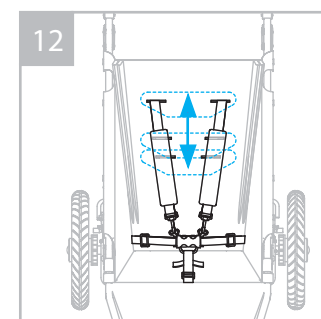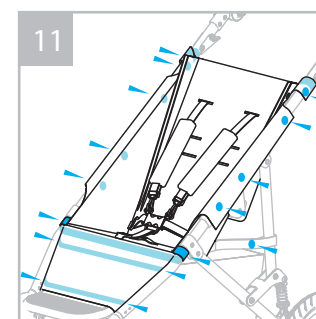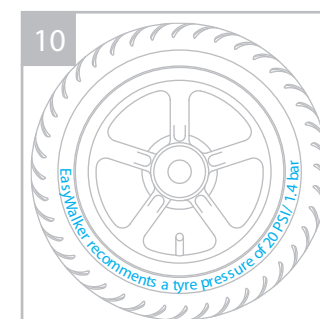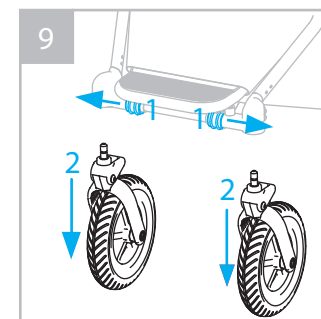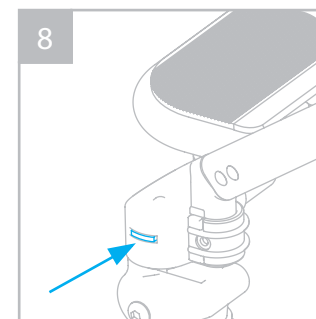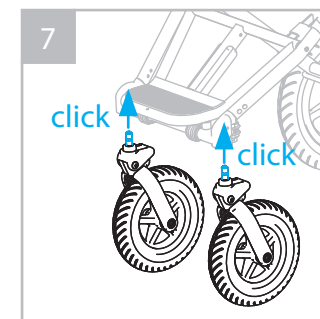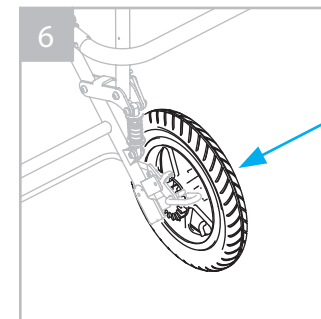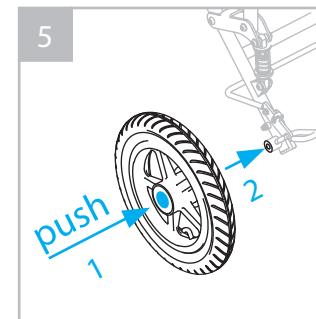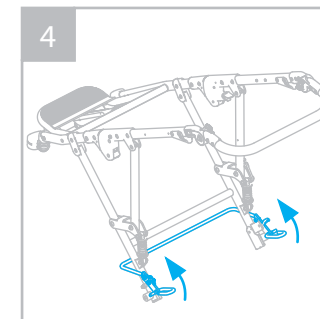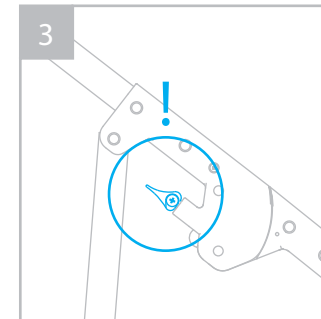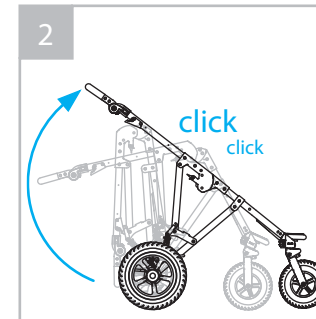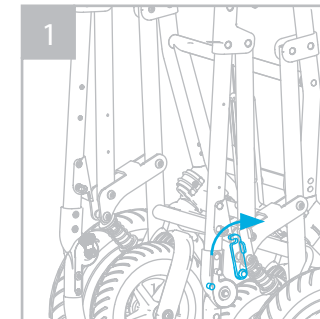

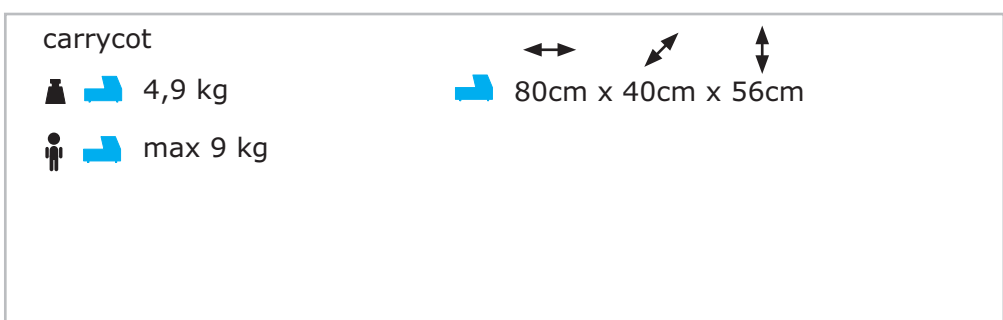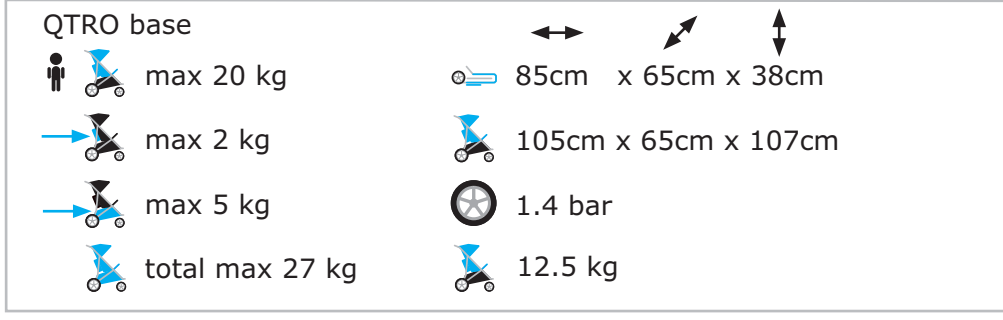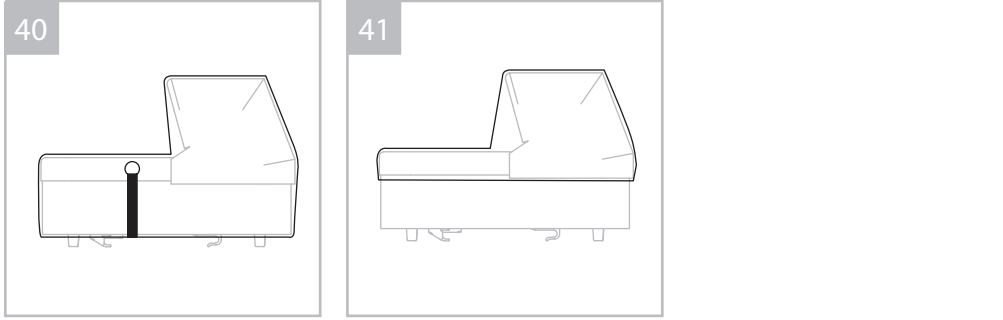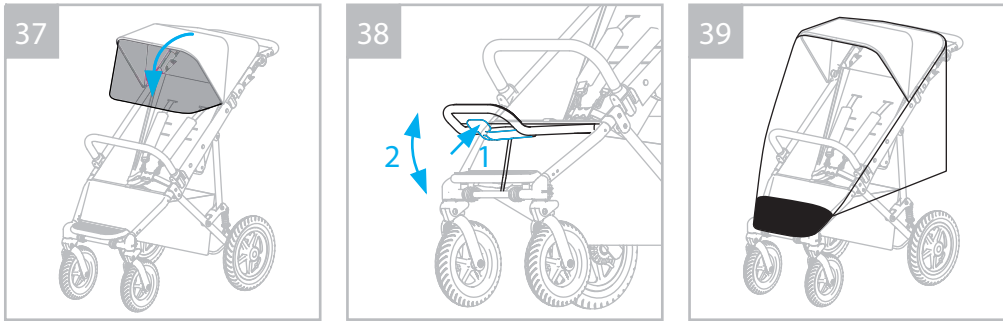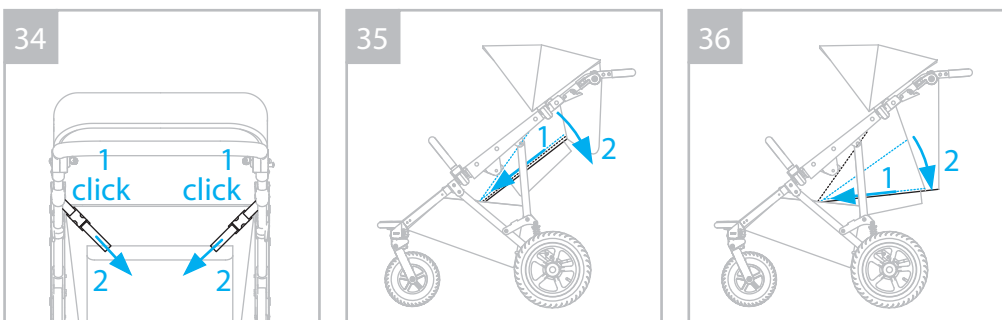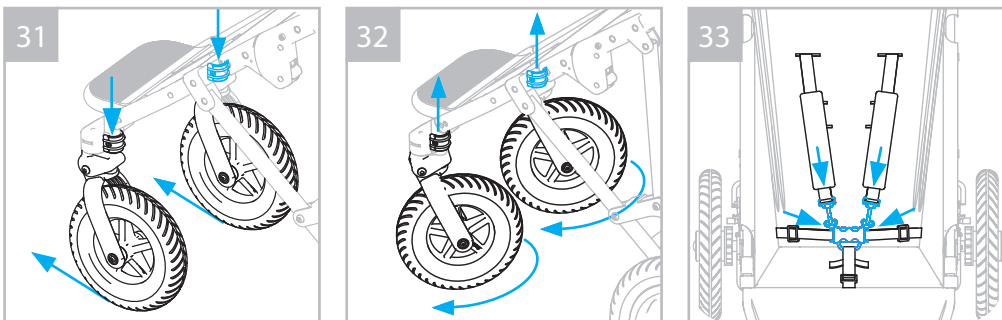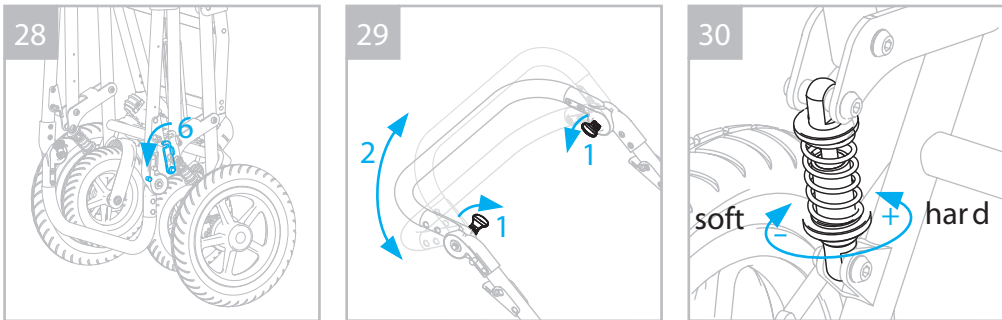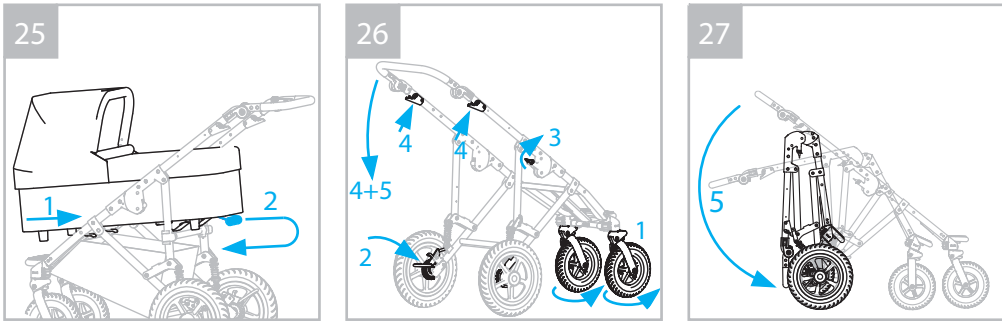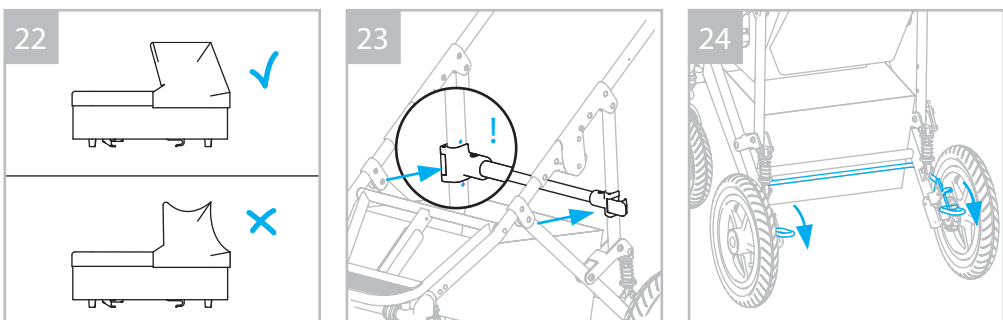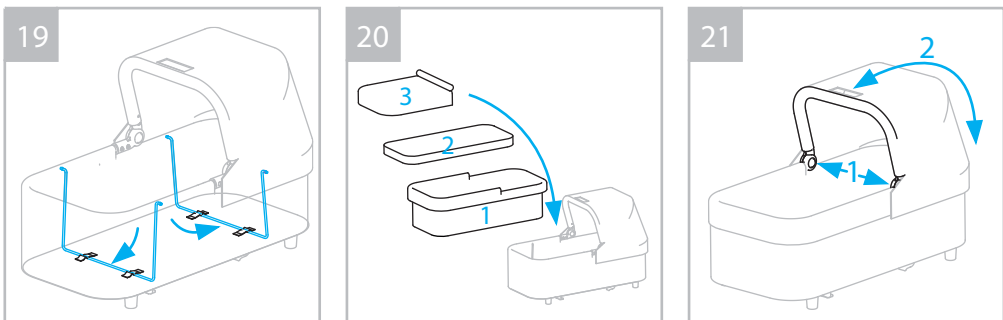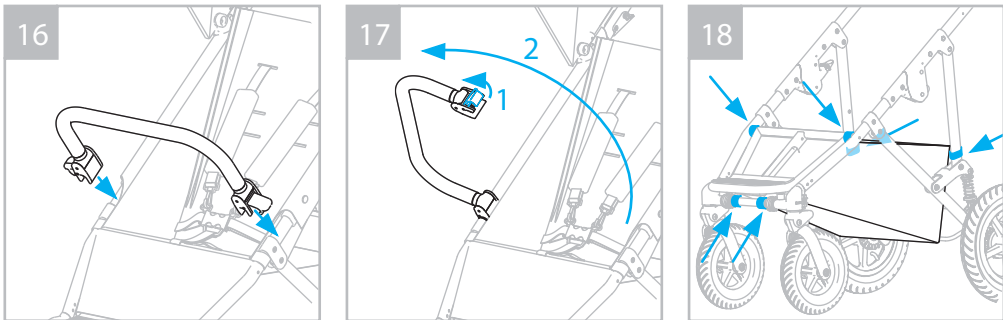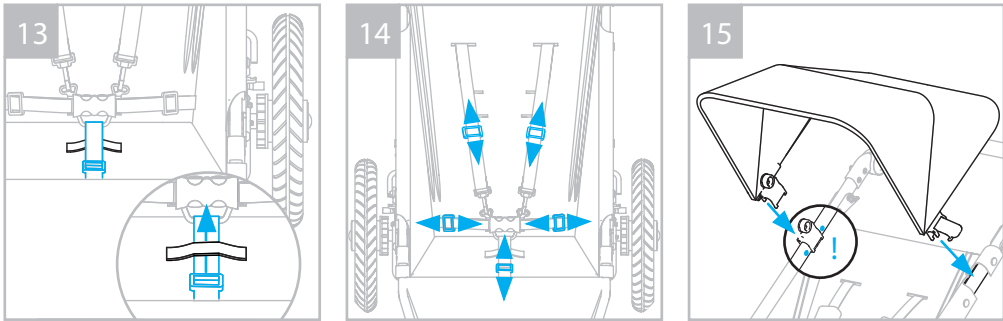

The Netherlands / Head office
Belgium / Luxembourg
EasyWalker bv
P.O. Box 138
1380 AC WEESP
+31-294-230351
www.easywalker.nl
www.easywalker.be
info@easywalker.nl

UK / Ireland
Bibs and Stuff
+44-1293774924
www.bibsandstuff.com
Sales@bibsandstuff.com

Spain / Portugal
Nikidom
+34-933003072
www.nikidom.com
nikidom@nikidom.com

Germany / Switzerland / Austria
Pamper24
+49-7664403274-17
www.pamper24.de
info@pamper24.de

France
Louillie sarl freekidds
+ 467359594
www.freekidds.com
info@freekidds.com

- 15 EasyWalker QTRO Instructions
- 16 Assembling the EasyWalker QTRO
 - 16 Contents of the box
 - 16 Frame
 - 16 Opening out
 - 16 Wheels
 - 17 Seat
 - 18 5-point harness
 - 18 Sun canopy
 - 18 Bumper bar
 - 19 Storage basket
- 19 Using the EasyWalker QTRO
 - 19 Parking brake
 - 19 Collapsing and opening out
 - 20 Raising the height of the push-bar
 - 20 Setting the suspension
 - 20 Alter position of swivel wheels
 - 20 Repairing/replacing tires
 - 20 5-point harness
 - 20 Seat and sun canopy
 - 21 Changing position of the footplate
 - 21 Rain cover
- 21 Assembling the EasyWalker carrycot
 - 21 Contents of the box
 - 22 Attaching carrycot to the frame
 - 22 Removing the carrycot from the frame
- 22 Using the EasyWalker carrycot
 - 24 Rain cover
 - 24 Mosquito net
- 24 Maintaining and cleaning the EasyWalker QTRO and the EasyWalker carrycot
- 25 Accessories
- 25 Guarantee conditions

EasyWalker QTRO Instructions

Congratulations on the purchase of your EasyWalker QTRO. The EasyWalker QTRO has been carefully created with comfort, safety, ease of use and design in mind. The EasyWalker QTRO meets all the European standards for child pushchairs EN1888:2003 +A1:2005+A2:2005+A3:2005. The EasyWalker carrycot meets the European standard EN1466:2004. Do not forget to complete the guarantee on the website and send it to us. You can then be sure of the best service and guarantee from EasyWalker.

We wish you a great deal of enjoyment with your EasyWalker QTRO.

IMPORTANT: Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

IMPORTANT: The EasyWalker QTRO is intended to be used for children from the age of 6 months, up to a weight of 20 kg. The EasyWalker carrycot is intended to be used for children from birth to the age of 6 months or 9 kg.

IMPORTANT: A maximum of 5 kilos worth of goods can be carried in the storage basket.

IMPORTANT: The EasyWalker QTRO should only be used with the accompanying seat and accessories. Only use the EasyWalker carrycot or accessories approved for use by EasyWalker on the EasyWalker QTRO.

IMPORTANT: Ensure that the parking brake is engaged when the EasyWalker QTRO is stationary.

IMPORTANT: The EasyWalker QTRO is only intended to be used to transport one child. A second child can be carried on an EasyBoard or in the EasyWalker DUO. Have a look at www.easywalker.nl or at the back of these instructions for the options.

IMPORTANT: Only use original EasyWalker QTRO accessories. When replacing parts only use original parts that are supplied and/or approved by EasyWalker B.V. The guarantee is invalidated if the EasyWalker QTRO is damaged due to overloading, incorrect use or use of non original accessories or parts.

- ⚠ **WARNING:** Keep plastic covers away from children to avoid suffocation.
- ⚠ **WARNING:** Never leave your child unattended in the EasyWalker QTRO. Never allow children to play with the EasyWalker QTRO, they could hurt themselves.
- ⚠ **WARNING:** Always use the 5-point harness as soon as your child can sit unaided.
- ⚠ **WARNING:** Always use the crotch strap in combination with the waist belt.
- ⚠ **WARNING:** The seat is not suitable for children under 6 months.
- ⚠ **WARNING:** Do not add a mattress thicker than 50 mm in the carrycot.
- ⚠ **WARNING:** Ensure that all the locking devices are engaged before use.
- ⚠ **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.
- ⚠ **WARNING:** Any load attached to the handle affects the stability of the pram/pushchair.

Assembling the EasyWalker QTRO

Contents of the box

The following items must be contained in the EasyWalker QTRO box:

- ☒ 1 frame with a wristband, seat and storage basket attached to it.
- ☒ 1 sun canopy.
- ☒ 2 rear wheels and 2 front wheels with inflatable tyres.
- ☒ 1 bumper bar.
- ☒ 1 rain cover for over the seat with the sun canopy.
- ☒ 1 connection tube for use with carrycot.
- ☒ 1 instruction leaflet.

If items are missing, immediately contact the shop where you purchased the pushchair.

⚠ **WARNING:** Keep plastic covers away from children to avoid suffocation.

Be aware of environmental considerations. When disposing of packaging, carefully separate rubbish for recycling.

Frame

IMPORTANT The EasyWalker QTRO should only be used with the accompanying seat and accessories. Only use the EasyWalker carrycot or accessories approved for use by EasyWalker on the EasyWalker QTRO.

IMPORTANT: When assembling the EasyWalker QTRO there should not be a child in the seat or cot.

TIP: If the instructions say left or right, this is always meant when looking from behind the EasyWalker QTRO push-bar.

TIP: All components are designed to fit one another so you do not need to use force. If something is not working, read the instructions again and try once more. If it still does not work then ask for help in the shop where you purchased the pushchair or go to www.easywalker.nl

TIP: Use the cardboard packaging as a mat whilst assembling the item.

The EasyWalker QTRO is easy to assemble. The EasyWalker QTRO is supplied with the seat and the storage basket already fitted.

Opening out

⚠ **WARNING:** Ensure that all the locking devices are engaged before use.

Take the frame out of the box and place it on the ground in front of you. You can use the cardboard packaging as a mat whilst assembling the item. If it is still secured, loosen the locking hook and pick up the EasyWalker QTRO using the push-bar (image 1). The EasyWalker QTRO will unfold by itself (image 2). If you hear a double click then the EasyWalker QTRO has unfolded correctly. Check whether the red safety catch on the right hand side of the EasyWalker QTRO is in the locked position (image 3).

Wheels

Flip the parking brake upwards (image 4). Insert the rear wheel into the rear axle of the frame while you press the button in the middle of the rear wheel (image 5).

Release the button and check whether the wheel is secured by pulling it. Repeat this process on the opposite side with the other rear wheel.

To remove the rear wheel, press the button in the middle of the rear wheel while pulling the wheel off the frame.

IMPORTANT: The rear wheel cannot be fitted to the frame if the parking brake is engaged.

The front wheel is mounted, as standard, on the front fork. You can secure this easily by placing the front fork with the swivelling wheel in the appropriate opening (image 7). Check whether the grey button (image 8) on the outside of the mounting is pressed in completely and whether the wheel is secured properly. Repeat this process on the opposite side with the other front wheel.

To remove the front fork and wheel, slide the black sliding button of the swivelling wheel at the front (under the footplate) towards the side of the pushchair (image 9). You should now see that the grey button on the outside of the mounting springs open. You can now take the front fork out of the mounting.

Inflate the tyres of the EasyWalker QTRO with a pump for car tyres. The maximum pressure for the tyres is 1.4 Bar (20 psi) (image 10).

TIP: You can buy a tapering converter at a bike shop so that you can use a bicycle pump to inflate the EasyWalker QTRO's tyres.

IMPORTANT: The maximum pressure for the tyres is 1.4 Bar (20 psi).

IMPORTANT: Ensure that all of the EasyWalker QTRO's tyres are inflated equally. Unequal tyre pressure can lead to instability of the EasyWalker QTRO and can impact upon the safety and comfort of your child.

IMPORTANT: If the tyres have been over inflated, they may explode in hot weather. Make sure you consider raised temperatures in the boot of your car or in a conservatory, for example.

IMPORTANT: There may be grease on the axle, be careful with clothing and never let children play with the wheels.

IMPORTANT: Do not leave the caps from the valves lying around. Prevent children putting them in their mouths.

Seat

 **WARNING:** Use a harness as soon as your child can sit unaided.

 **WARNING:** The seat is not suitable for children under 6 months.

The EasyWalker QTRO is supplied with the seat and the storage basket already fitted. To remove the seat, open the Velcro fastenings behind the footplate. Then open the poppers on the fabric tapes, left and right on the back of the seat. Now open all other poppers and Velcro fastenings on both sides of the seat (image 11).

To put the seat back onto the frame close the poppers and Velcro fastenings on both sides of the seat. Close the Velcro fastenings behind the footplate. Finally, close the poppers on the tapes at the back of the seat around the frame tubes, just above the rear suspension. These tapes are part of the harness and provide extra comfort and security for your child.

 **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.

5-point harness

 **WARNING:** Always use the 5-point harness as soon as your child can sit unaided.

 **WARNING:** Always use the crotch strap in combination with the waist belt.

EN

The EasyWalker QTRO seat is supplied, as standard, with the shoulder straps in the highest position. You can set the shoulder strap to a lower position so that smaller children are seated more comfortably (image 12). To do this, click the shoulder straps to release them from the crotch strap and take the shoulder pads off. Open the zip at the top of the back support. You can now take the shoulder strap through one of the other openings. Click the shoulder strap back onto the crotch strap and shut the zip at the top of the back support.

The EasyWalker QTRO seat is supplied, as standard, with the waist strap in the smallest position. You can set the waist strap to a larger position so that larger children can be seated more comfortably (image 13). To do this, take the waist strap out of the loop on the base of the seat.

You can use the sliding buckles to make the shoulder, hip and waist straps tighter or looser (image 14).

TIP: The tapes on the rear of the seat that go around the frame, just above the rear suspension are part of the harness and provide extra comfort and security for your child. Ensure that these are always closed around the frame.

Sun canopy

In order to attach the sun canopy place it, with open attachment clips, inside the upper recess in the seat fabric, exactly between the two caps behind the frame (image 15). Click the attachment clip shut.

To remove the sun canopy click and release the attachment clip on the sun canopy on both sides of the push-bar. You can now remove the sun canopy from the frame.

TIP: Give yourself enough space. Before assembling or dismantling, release the poppers around the recess in the seat fabric.

IMPORTANT: After assembly shut all poppers again.

IMPORTANT: A small child has very sensitive skin. Never leave your child in the EasyWalker QTRO in the sun without the sun canopy on.

Bumper bar

Place the bumper bar with opened clips on the frame in the lower recess in the seat fabric and shut both clips (image 16). To remove the bumper bar, open the clips and remove the bumper bar from the frame. You can also release the bumper bar on one side to make getting in and out easier for your child. Open the clip on one side and swivel the bumper bar to open (image 17). Swivel the bumper bar back to close and close the clip on the frame.

TIP: Give yourself enough space. Before assembling or dismantling, release the poppers around the recess in the seat fabric.

TIP: If one of the clips from the bumper bar is open, the bumper bar is fragile. Do not allow your child to lean on it.

IMPORTANT: Before use always check whether the bumper bar is securely fixed to the frame.

IMPORTANT: After assembly shut all poppers again.

Storage basket

The EasyWalker QTRO is supplied with the seat and the storage basket already fitted. To remove the storage basket, open all Velcro fastenings and poppers on the front and rear of the storage basket. To reattach the storage basket, put the tapes and Velcro through the buckle around the frame and close the tapes and Velcro fastenings (image 18). The storage basket is accessed easily using the two zip fastenings.

Using the EasyWalker QTRO

IMPORTANT: Avoid dangerous situations. Always use the wrist band attached to the pushbar. Take your child out of the EasyWalker QTRO if you go up or down stairs, escalators or steep hills.

IMPORTANT: Do not use the EasyWalker QTRO if any part is broken, torn, incomplete or does not seem to be functioning correctly.

IMPORTANT: The EasyWalker QTRO is not designed for use when jogging or rollerskating.

IMPORTANT: The rods between the rear wheels are not suitable for standing on. This is unsafe and can damage the EasyWalker QTRO.

Parking brake

IMPORTANT: Ensure that the parking brake is engaged when the EasyWalker QTRO is stationary.

Push the parking brake at the back of the frame gently downwards with the foot. Ensure that the sides of the brake fall into the designated recesses on the rear wheels so that the EasyWalker QTRO cannot move (image 24). To release the brake on the EasyWalker QTRO, push the brake upwards with the foot (image 4).

Collapsing and opening out

⚠ WARNING: Ensure that all the locking devices are engaged before use.

You can leave the seat and the sun canopy in place on the EasyWalker QTRO when collapsing and folding out. If using the EasyWalker carrycot or a car seat these must first be removed.

Position the front wheels with the wheels swivelled and pull the EasyWalker QTRO backwards slightly so that the front wheels turn forwards. Engage the parking brake and turn the sun canopy upwards. Click the red safety catch (located on the right hand side of the frame) upwards. Standing behind the pushchair, squeeze the unlocking handles on both sides of the push-bar. Move the push-bar downwards while keeping the unlocking handles pushed in (image 26 + 27). Close the locking hook on the right hand side of the frame around the designated pin (image 28).

To open out the EasyWalker QTRO, release the locking hook and pull the EasyWalker QTRO up by the push-bar. The EasyWalker QTRO will unfold by itself. If you hear a double click then the EasyWalker QTRO has unfolded correctly. Check whether the red safety catch on the right hand side of the EasyWalker QTRO is in the locked position.

TIP: The four wheels and bumper bar can be removed to make the folded pushchair more compact.

Raising the height of the push-bar

Release the left and right black clips on the inside of the push bar (located just under foam). Move the push-bar to the desired height and lock the clips (image 29).

Setting the suspension

You can modify the EasyWalker QTRO's suspension by tightening or loosening the screw button under the suspension by the rear wheels (image 30). Ensure that the suspension settings are the same on both sides of the frame.

Alter position of swivel wheels

Slide the black sliding button (above the swivel wheel) downwards to secure the front wheel into a fixed position (image 31). The wheel will lock if you now turn it. Slide the sliding button (above the swivel wheel) upwards to put the front wheel in the swivel position again (image 32). Ensure that both front wheels always have the same setting.

IMPORTANT: There may be grease on the axle, be careful with clothing and never let children play with the wheels.

Repairing/replacing tires

Repair a punctured wheel in the same way as you would repair a bicycle wheel. It is also possible to replace the inner tube. Tire levers must be used to remove the outer tire.

IMPORTANT: There may be grease on the axle, be careful with clothing and never let children play with the wheels.

IMPORTANT: Do not leave the caps from the valves lying around. Prevent children putting them in their mouths.

5-point harness

⚠ **WARNING:** Use a harness as soon as your child can sit unaided.

⚠ **WARNING:** Always use the crotch strap in combination with the waist strap.

Place your child in the seat. Click the shoulder strap and the crotch strap into place and slide both locking parts of the crotch strap into the waist strap lock (image 33). The 5-point harness is now locked. Open the 5-point harness to remove your child from the seat.

IMPORTANT: Ensure that the parking brake is engaged when the EasyWalker QTRO is stationary.

IMPORTANT: It is important, for the comfort and safety of your child, that the shoulder straps, the crotch strap and the waist strap is fixed in the right position and is not too tight or loose.

Seat and sun canopy

⚠ **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.

IMPORTANT: Ensure that the parking brake is engaged when the EasyWalker QTRO is stationary.

IMPORTANT: Before use always check whether the bumper bar is securely fixed to the frame.

The EasyWalker QTRO has four seat settings. If you are using the seat for the first time, all zips on the sides of the seat will be closed, as will the clips above the seat on the back. This is the most vertical position. You can set the seat position by releasing or closing the clips on both sides above the seat (image 34). You can change the position of the seat further by completely opening or closing the zips on the sides of the seat (image 35 + 36).

IMPORTANT: Open or shut the same zips on both sides of the seat.

TIP: For the comfort of your child, support the seat back with your hand when opening or closing the zips.

TIP: Ensure the zips are always either completely open or completely closed.

There is an integrated UV screen with an UPF protection factor 10 under the sun canopy. This is secured with two buttons under the sun canopy. Release the buttons and fold the screen outwards in order to protect your child against sunlight (image 37).

Changing position of the footplate

You can change the position of the footplate so that your child can sit or lie more comfortably. To change the position, push the handle under the footplate (image 38). Adjust the footplate to the desired position and release the handle.

Rain cover

The EasyWalker QTRO is supplied, as standard, with a rain cover for over the seat with sun canopy. Place the rain cover so that the stitching rests on the front and rear edge of the sun canopy and the wide red edge comes to the height of the underside of the footplate. Attach the rain cover with Velcro (image 39).

TIP: The rain cover has reflective stitching so that you are visible to other road users in the dark and during bad weather.

IMPORTANT: The rain cover has ventilation holes on the sides. These ensure fresh air can circulate so do not block them.

IMPORTANT: Do not let your child sit under the rain cover unnecessarily. Ensure that your child does not get too hot.

Assembling the EasyWalker carrycot

Content

- 22 Contents of the box
- 22 Assembling the EasyWalker carrycot
- 22 Using the EasyWalker carrycot
- 24 Rain cover
- 24 Mosquito net

- ⚠ WARNING: Read the instructions carefully before use and keep them for further reference.
- ⚠ WARNING: Do not leave your child unattended.
- ⚠ WARNING: Do not let other children play unattended near the carrycot.
- ⚠ WARNING: Never use the Carrycot on a stand.
- ⚠ WARNING: Keep plastic covers away from children to avoid suffocation.
- ⚠ WARNING: Do not add a mattress thicker than 50 mm in the carrycot.
- ⚠ WARNING: Check that the carrycot body or seat unit attachment devices are correctly engaged before use.
- ⚠ WARNING: Use a harness as soon as your child can sit unaided.
- ⚠ WARNING: This product is only suitable for a child that cannot sit up unaided.
- ⚠ WARNING: The EasyWalker carrycot is intended to be used for children from birth to the age of 6 months or 9 kg.
- ⚠ WARNING: Do not use the carrycot if any part is broken, torn or missing.
- ⚠ WARNING: Only use the EasyWalker carrycot or accessories approved for use by EasyWalker on the EasyWalker stroller.
- ⚠ WARNING: Only use replacement parts and accessories approved by EasyWalker BV.
- ⚠ WARNING: Ensure that the parking brake is engaged when the EasyWalker stroller is stationary.
- ⚠ WARNING: When assembling the EasyWalker carrycot there should not be a child in the seat or carrycot.
- ⚠ WARNING: Check regularly for signs of damage and wear of the handles and clips at the bottom of the carrycot.
- ⚠ WARNING: Only use the EasyWalker carrycot on a firm, horizontal level and dry surface.

Contents of the box

The following items must be contained in the EasyWalker carrycot box:

- 1 carrycot with sun canopy and cover.
- 1 mattress with fleece and cotton cover.
- 1 rain cover.
- 1 mosquito net.
- 1 sheet cover.
- 1 instruction leaflet.

You will also need the connection tube you received in the box of the EasyWalker stroller.

The EasyWalker carrycot is simple to assemble. Before using for the first time, take the carrycot out of the box, take the cover off the carrycot and remove the accessories, the mattress and the inside covers. Pull the fastener on the bar (nearest to the head-end) in the direction of the head-end until it clicks, left and right, into the metal holder (image 1). Pull the fastener on the bar (nearest to the foot-end) in the direction of the foot-end until it clicks, left and right, into the metal holder (image 1). Attach the inside covers to the carrycot again with Velcro. Put the mattress back in the carrycot (image 2). You can now choose whether you want the fleece or cotton side uppermost. Turn the sun canopy upwards by pushing the black buttons on both sides of the sun canopy and simultaneously turning the canopy upwards (image 3). Ensure that the canopy cannot turn any further and release the buttons (image 5). Reattach the cover over the carrycot and choose the position of the wind screen (image 4).

Using the EasyWalker carrycot

Attaching carrycot to the frame

Engage the parking brake of the stroller (image 6). Remove the seat, the sun canopy and the bumper bar from the frame. Place the connection tube (In box of stroller) with open clips, on the inside against the frame. Position between the two caps and shut the left and right clips until they click.

IMPORTANT: Always be careful with open fires and other heat sources in the vicinity of the EasyWalker QTRO and your child.

The EasyWalker QTRO and the EasyWalker carrycot have been carefully created with comfort, safety, ease of use and design in mind. The EasyWalker QTRO and the EasyWalker carrycot meet European safety standards. Assembly and use are comprehensively explained in the instructions. To get the most out of your EasyWalker QTRO please follow the instructions provided.

However, you are advised to regularly check your EasyWalker QTRO and EasyWalker carrycot. It is recommended that you have your EasyWalker QTRO serviced at the shop where you bought it once every two years. If you have any doubts about the state of one or more of the components in the interim, contact the shop where you purchased the item. They will assess the EasyWalker QTRO and the EasyWalker carrycot and carry out simple repairs. The shop owner will always contact the manufacturer should there be serious problems.

IMPORTANT: Keep your proof of purchase and the instructions safely.

IMPORTANT: The serial number of the EasyWalker QTRO can be found on the inside of the tube on which the left rear wheel is attached.

The serial number of the covers and other fabric parts can be found on the fabric labels. The serial number for the EasyWalker carrycot can be found on the fabric label.

Regularly clean the EasyWalker QTRO. Use a damp cloth for this and a mild cleaning solution if necessary. The swivel wheel holder and the rear wheel axles regularly get dirty. Take the wheels out of the holder or axle on a regular basis and clean with lukewarm water. Ensure that all parts are dried thoroughly and oil the axles lightly with oil or silicone spray before replacing the wheels. Protect the foam on the push-bar against friction and sharp objects. Avoid exposing the EasyWalker QTRO to extreme temperatures.

Fabrics used on the EasyWalker QTRO and EasyWalker carrycot are removable and can be washed in the washing machine. Never bleach, dry-clean or wash the fabrics at over 30 degrees and never dry in the tumble dryer. Before washing always remove the fastenings, foam and plastic or metal parts. Always refer to the washing label on each part. The EasyWalker QTRO is not resistant to salt water so do not use it in the sea. During wet weather always use the rain cover supplied for the seat with the sun canopy or the carrycot. If the EasyWalker QTRO and the EasyWalker carrycot are wet due to cleaning or rain do not collapse but leave to dry opened out in a well ventilated room. This prevents the formation of mould.

Lift up the carrycot using the grips in the sun canopy and under the foot-end. Slide the hooks (under head-end) over the tube at the front of the frame above footplate. Now pull the hand grip (under foot-end) backwards so that the clips open and, at the same time, push the clips over the connection tube. Let go of the hand grip. The clips shut by themselves around the connection tube (image 7).

 **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.

 **WARNING:** A small child has very sensitive skin. Never leave your child in the EasyWalker DUO in the sun without the sun canopy on.

Removing the carrycot from the frame

Engage the parking brake of the EasyWalker stroller (image 6). To remove the carrycot from the frame, hold onto the carrycot by the hand grips in the sun canopy and under the foot-end. Now pull the hand grip (under the foot-end) backwards so that the clips under the foot-end open and, at the same time, lift the foot-end away from the connection tube. Slide the carrycot towards the head-end, away from the tube at the front of the frame.

TIP: The carrycot has four black feet on the underside so that it can be used as a cot without a supporting frame.

TIP: The hand grip in the sun canopy is suitable for lifting the carrycot if it has been lifted up completely. In the bag, at the foot-end, there is an extra hand grip so that you can carry the carrycot.

Rain cover

The EasyWalker carrycot is supplied, as standard, with a rain cover. Place the rain cover so that the stitching rests on the front and rear edges of the sun canopy and the ventilation window is by the opening. Shut the sides by closing the Velcro fastenings and closing the popper. The elastic on the underside rests on the lower edge of the carrycot (image 8).

TIP: The rain cover has reflective stitching so that you are visible to other road users in the dark and during bad weather.

IMPORTANT: The rain cover has a ventilation window at the front that can be closed using Velcro. You can open and secure the window with the button and the elastic loop.

IMPORTANT: Do not let your child sit under the rain cover unnecessarily. Ensure that your child does not get too hot.

Mosquito net

The EasyWalker carrycot is supplied, as standard, with a mosquito net. Place the mosquito net over the carrycot so that it connects properly to the carrycot. (image. 9).

Maintaining and cleaning the EasyWalker QTRO and the EasyWalker carrycot

IMPORTANT: The EasyWalker QTRO is only intended to be used to transport one child. A second child can be carried on an EasyBoard or in the EasyWalker DUO. Have a look at www.easywalker.nl or at the end of these instructions for the options.

IMPORTANT: Only use original EasyWalker QTRO accessories. When replacing parts only use original parts that are supplied and/or approved by EasyWalker bv. The guarantee is invalidated if the EasyWalker QTRO is damaged due to overloading, incorrect use or use of non original accessories or parts.

Parts of the EasyWalker QTRO and the EasyWalker carrycot can slightly discolour or become worn as a result of weather conditions and usage. This can also occur with normal usage.

TIP In order to avoid having a colour difference, you are advised to wash items of the same colour together.

Accessories

IMPORTANT: Only use original EasyWalker QTRO accessories. When replacing parts only use original parts that are supplied and/or approved by EasyWalker B.V. The guarantee is invalidated if the EasyWalker QTRO is damaged due to overloading, incorrect use or use of non original accessories or parts.

⚠ WARNING: Any load attached to the handle affects the stability of the pram/pushchair.

The EasyWalker QTRO and the EasyWalker carrycot have been carefully created with comfort, safety, ease of use and design in mind. The EasyWalker QTRO and the EasyWalker carrycot are supplied, as standard, with the most important accessories. In addition to the standard kit, EasyWalker also offers a wide range of accessories. Go to www.easywalker.nl for the options.

Summary of available accessories for the EasyWalker QTRO:

- EasyWalker carrycot
- EasyWalker Maxi-Cosi Cabrio adapter
- EasyWalker Nursery bag
- EasyWalker foot muff
- EasyWalker cupholder
- EasyWalker parasol
- EasyWalker UV-mosquito net
- EasyWalker travel bag
- EasyBoard
- EasyWalker BeSafe iZi Sleep adapter
- EasyWalker mini pump

Guarantee conditions

In its capacity as manufacturer, EasyWalker provides a guarantee for EasyWalker QTRO's and EasyWalker carrycots produced by them, under the following conditions:

The guarantee commences on the date stated on the proof of purchase and is valid for two years. This is in accordance with the manufacturer's (importer's) specification concerning correct use of the product or what may be expected as normal when using it. The guarantee for rims, outer tyres, inner tubes, foam, spokes, covers and accessories only relates to construction and/or material faults. If you should encounter defects you should go back to the shop where you purchased the item. If they cannot help you with your problem the shop will send the product back to the manufacturer with a clear description of the problem as well as a copy of the proof of purchase with date. You cannot demand an exchange or refund. Repairs allow the guarantee period to be extended. EasyWalker is never liable for damage other than to the product produced by EasyWalker.

A guarantee is not provided if:

- ☒ The product is provided to the manufacturer/importer without a copy of the original purchase receipt.
- ☒ Defects have been caused by incorrect use or maintenance, deviating from what is stated in the instructions or what can be expected as reasonable when using the product.
- ☒ Repairs to the product have been carried out by third parties without prior consent from the manufacturer.
- ☒ The defect has been caused by neglect.

- ☒ The defect was caused as a result of an accident.
- ☒ It involves normal wear and tear that may be expected with daily use.
- ☒ It concerns the loss of parts.
- ☒ Damage caused by using accessories of another brand.
- ☒ Otherwise not conforming with the aforementioned guarantee conditions.

In the latter situation, the ultimate decision as to whether the part falls under the guarantee will be taken by the manufacturer's service department. Above guarantee conditions are supplementary to legal rights. The guarantee only applies to the first owner and is not transferable.

IMPORTANT: Keep your proof of purchase and the instructions safely.

IMPORTANT: The serial number of the EasyWalker QTRO can be found on the inside of the tube on which the left rear wheel is attached.

The serial number of the covers and other fabric parts can be found on the fabric labels.

The serial number for the EasyWalker carrycot can be found on the fabric label.

If you have any questions please ask in the shop where you purchased the EasyWalker QTRO and the EasyWalker carrycot. Ensure you have the following details to hand:

Type of EasyWalker and the serial number of the frame and covers.

Purchase receipt

In order to improve the EasyWalker QTRO and the EasyWalker carrycot we would love to hear your opinion. This may concern design, use, materials and instructions. Mail your ideas to info@easywalker.nl

We wish you a great deal of pleasure when using your EasyWalker QTRO.

EasyWalker bv.

The utmost care was exercised in designing and compiling these instructions. We cannot, however, offer any guarantees with regard to the completeness and correctness of the information contained herein.